 


Smartphone Wireless Mirroring Screen


User manual

OD40

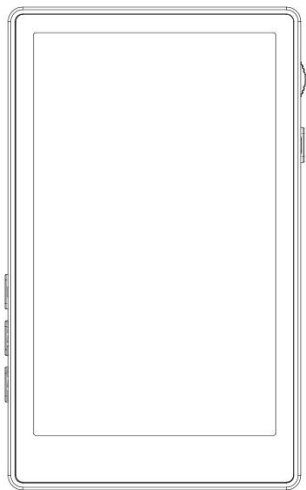

**Please read the user manual completely
before use**

Products Structure and Buttons Function

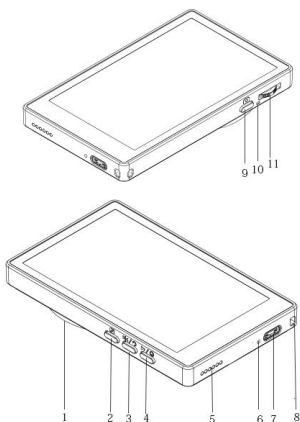

- 1.Magnetic Ring 2.Screen Scale Button 3.Screen Rotation Button 4.Power Button 5.Speaker 6..Charging indicator Light 7.Type-c Charging Port 8..Lanyard Hole 9.0.Shutter Button 10..Bluetooth indicator Light 11.Zoom Button

Push-button	Function
2.Screen Scale Button	Click to switch between full screen/stretch/standard aspect ratio
	Long press to switch display mode CM_S/CM-B (switch to CM_S mode when screen mirroring is not possible in some countries)
3.Screen Rotation Button	Click to rotate screen 90 degrees clockwise
	Long press to switch language/screen mirroring
4.Power Button	Press & hold 3s for ON/OFF
	Click to turn on/off the selfie screen sound
10.Shutter Button	1.Click to take photos or start / stop video recording 2.Double click to switch between front & rear cameras 3.Long press to return to the main interface
12.Zoom button	Move up/down to zoom in/out of the shooting focal length
	Click/double-click to switch between left and right camera modes (Some phones don't support it)
When the Android phone can't zoom, turn the zoom button upwards and simultaneously press the capture button for 5 seconds until the red light flashes.	

Operation Method:

1. Charging

1.1 Low battery warning: Red light flashing

1.2 When charging, the green light flashes; Full of red lights on

2. Power on

Press and hold the power button for 3s to turn on/off,

If it is not connected to the phone within 5 minutes after booting up, the product will auto shut off.

3. Bluetooth connection method

After power on, the Bluetooth indicator light flashes green

Turn on the Bluetooth function on your phone, search and find the Bluetooth name OD40xxxx to connect, and after successful connection bluetooth indicator light will turn off

4. Apple phone settings

Settings --> Accessibility --> Zoom --> On

< Back

Zoom

Zoom



Zoom magnifies the entire screen:


- Double-tap three fingers to zoom
- Drag three fingers to move around the screen
- Double-tap three fingers and drag to change zoom

5.Mobile screen mirroring connection

5.1 Android Phone Screen Projection Connection

Slide down the top right corner of the phone screen and click on wireless screen mirroring

Search and select device OD40-XXXXX

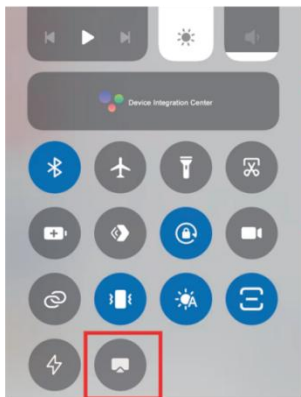


Special Notice:

Some phones do not support screen mirroring (touch) or some content does not support screen mirroring.

5.2 iPhone Screen mirroring Connection

Slide down the top right corner of the phone screen, click on the screen mirroring, search and select the device OD40-XXXXXX.

Quire entering a PIN code (1234) for initial connection.

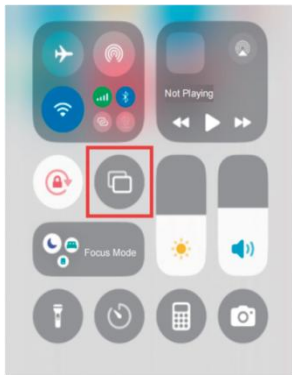

1. Touch operation

6.1 After screen mirroring and Bluetooth connection, you can touch and reverse control the phone

6.2 Touch only supports black border full screen mode, cutting mode is not supported. Some Android phones require mode switching (Press the zoom button downwards and

simultaneously press the shutter button for 5s, and the green light will flash twice)

6.3 When unable to exit the page by touch, long press the shutter button.

Product Parameters:

Model: OD40

Power input: 5V 2A

Battery capacity: 3.7V 1500mAh

Screen size: 3.97 inches

Resolution: 480 * 800 pixels

Wireless network: 2.4G&5.8G

Transmission distance: 10-30 meters

Working temperature: -10 °C -+60 °C

Special Notice:

1.The product uses a wireless image transmission module, and it is normal for the product to generate heat during use.

2.Different mobile phones have different display ratios, and the product screen is not fully displayed.

Packing List

1. Selfie screen 2. Hanging rope 3. Magnetic ring 4. Type-C charging cable 5. Instruction manual 6. Packaging box

Warranty Description:

1. Within 30 days from the date of purchase, if there are quality problems with the product under normal use, users can enjoy free replacement or repair services.

2. Malfunctions caused by personal reasons of the user are not covered by free warranty, as follows

(1) Injury caused by unauthorized disassembly, modification, etc.:

(2) Injury caused by accidental falling during use:

(3) Any damage caused by human error or third-party negligence, misuse (such as water ingress into the host, external shock cracking, scratches on peripheral components, etc.), is not covered by the warranty.