SELFIESTICK
使用说明

兼容

✓ IOS ✓ Android

一体追踪云台

云台操作说明

1.长按5秒启键关闭机/开机。
2.开机后，调整摄像头角度，以保证拍摄画面，如拍摄不到人脸，请打开后，将面对人脸，调整角度后再拍摄。
3.单击手势按钮两次，即可开启/关闭手势功能。
4.单击开启按键两次，即可开启/关闭全景旋转功能。
5.单击开启按键两次，即可开启/关闭全景旋转功能。
6.单击开启按键两次，即可开启/关闭全景旋转功能。
7.连续一下人脸模式，被跟随人脸时，跟随一圈/次，最快10秒/次，如跟随的面积人不在跟随头两侧1/3，则灯灯，但机头未开始或者将机开关关键，进入全跟随，即手势或者人脸都跟随。
8.全跟随模式下，单击，按住一圈/次，15分钟时间，15分钟内进入人，正常跟随。
9.单击全景拍摄模式，单击后拍照键，慢速旋转180°后，再单击停止拍照，即可拍摄。
10.单击开启按键两次，即可开启/关闭全景旋转功能。
11.当跟人不在跟随范围后 15 分钟自动关机。
12.电池续航时，开机状态下打开灯可跟随模式，一分钟后关机。电压太低小于 3.9V开不了机。
13.按键灯闪烁，充满后灯灭。

遥控器操作说明

连接蓝牙：
长按A键开关机，LED灯闪烁白灯即已开机。
然后打开手机的蓝牙选项，搜索设备蓝牙名为 VIP 点击完成配对，显示已连接即完成。

备注：
安卓连接即可使用，苹果手机先打开辅助触控功能使用(操作方式设置-辅助功能-触控-辅助触控进行开，出现有圆点点即打开辅助触控功能)

教学视频

遥控器操作说明

本产品默认为抖音模式：
抖音快手模式：按上下左右分别为手机上下左右滑动翻页。
单击A键播放/暂停，双击点赞。
C键为拍照/录视频键。
B键长按为调整鼠标位置键

如果鼠标太靠边了无法刚视频：
长按B按键(视频符号键)+上下左右，调整鼠标圆点位置到屏幕中心处)

遥控器操作说明

1:即时录制音频新版本

2:打开抖音软件选择"+"号拍摄按键



3:选择右上角设置按键

4:打开使用音量键拍摄

取出自拍器

从左右两边取出遥控器。

可充电电池

快速充电，直接充电无需更换电池。
手机充电宝可充电。

夹子可旋转

自由翻转，横竖拍实现多角度拍照，拍照更稳心

怎么打开四脚架

旋转底部旋钮
1.锁定状态，往右边旋转解锁脚架，展开脚架，往左边旋转锁定脚架，脚架立起。
2.展开状态，往右边解锁脚架，脚架收起，再往左边旋转锁定脚架。

稳固云台上手就拍

拍摄不用小心翼翼，底座很稳很满意，手柄可360°旋转

360°旋转稳固云台

平滑顺畅，轻轻松松拍出全景大片

四脚架模式

捏住电镀件向下推动或向上提起，以打开或关闭脚架。

产品参数

品名:	AI跟拍云台支架
材质:	ABS+电子元件
电池型号:	聚合物102050
电池容量:	3.7V/1500mAh
续航:	6-8小时
充电:	自动充满电约3-5小时(建议使用满电的5小时)
可控角度范围:	左右(前向)-360°无限制手动上下(俯仰)180
主控芯片:	科大讯飞
主机充电功率:	4.3W

遥控参数

电池型号:402025聚合物(可充电电池)	
充电条件:5V1A	
电池容量:150mAh	
充电电流约100mA	
充满电时间约1-2小时	
蓝牙版本:5.2	
蓝牙名称:VIP	
蓝牙通讯适用于蓝牙3.0版本及以上	
操作系统:ios/安卓通用(适用于大部分手机，安卓8.0以上，IOS 4以上)	
发射频率:2.4GHz-2.4835GHZ	
通讯距离:10m（32英尺）	
遥控器最大发射功率:2dbm	

关于遥控器连接手机失败的个例问题解决方案

1.打开手机蓝牙,清除掉一部分已经配对过的设备
2.手机关机重启。
3.蓝牙连接距离不要远。
4.重新打开手机蓝牙进行连接。
5.如果以上方法都无法连接手机，手机界面搜索到VIP时，点击连接,界面显示“正在连接/配对”时,连续快速按遥控器键，即可正常连接。
6.只有ios+方法按时需要激活，以后都是自动连接,正常使用。

关于安卓系统手机个别出现按遥控器为加音量/调焦距/或无反应的问题的解决方案。

1.打开相机进入拍照界面。
2.在长按调动相机时的设置。
3.点击音量键功能。
4.将音量键功能设置为拍下手机界面按钮或者对焦。
5.个别手机相机设置路径不同,请自行查找

鸿蒙系统 手机音量键设置为拍照键

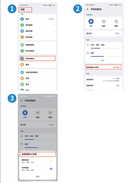

安卓系统 手机音量键设置为拍照键

SELFIESTICK
INSTRUCTIONS

COMPATIBLE

✓ IOS ✓ Android

Integrated tracking gimbal

Pan tilt operation instructions

1. Press and hold the power button for 2 seconds to turn on/off it.
2. After starting up, adjust the angle of the camera to ensure that the face can be detected. If the face cannot be detected, please turn it on after the detection, the green light is always on (normal tracking status), and the face on both sides of the screen 1/3 is not tracked.
3. Click the power button to stop tracking, the red light remains on, and the gesture or panoramic mode will be turned off.
4. Double-function gesture on the camera: Flat the palm and release for 3 seconds to stop tracking, and hold the OK gesture for 1 second to start tracking.
5. Click the palm button to turn off the panoramic mode and enter the face indicator light state. Face detected: blue light constantly on. Face not detected: blue light flashes three times per second. Click the palm button and enter the green indicator light (same with gesture function).
6. Follow only one person mode: Hi gesture, indicator light flashes three times per second, and then enters the following mode. Other people or others pass through yellow light flashes three times but do not follow, OK gesture to release one person mode.
7. Follow all people mode: Not followed by others, the yellow light will flash continuously and turn red after 10 seconds of tracking. If the tracked person is not in the middle 1/3 of the screen, the red light will flash three times per second. Anyone can make an OK gesture or click the power button to enter the "Follow only one person" mode to release tracking.
8. In full-time mode, if lock, the green light will keep flashing, the device will shut down after 15 minutes, and if a person enters within 15 minutes, it will be tracked.
9. Slow panoramic mode: Click the rotation button, slowly rotate clockwise, then click to stop rotating and follow, double-click the rotation button to start panoramic rotation, and click to stop rotating. Click or double-click the on/off button when rotating to exit panoramic mode and follow.
10. Quick panoramic mode: Three clicks on the rotation button, quickly rotate clockwise 360°, click to stop rotating and follow. When rotating, click the on/off button to exit panoramic mode and follow.
11. If the person is not in the camera for 15 minutes, it will automatically shut down.
12.When the battery is low, the red light flashes to remind and it is automatically shut down after 1 minute. Do not turn on when the battery is less than 3.2V,it is start the machine.
13. The charging red light remains on, while the fully charged red light goes off.

HOW TO USE

Connect to Bluetooth:
Long press A button to start the machine on and off, and then turn on the LED flashing white light Phone bluetooth option, search device Bluetooth name: VIP click to complete the configuration. Yes, the connection is complete

Remarks:
Android connection can be used, iPhone first open the Assistive Touch function (Settings-General-Accessibility-Auxiliary function - Touch - Auxiliary touch select open, touch dot appears to open the auxiliary touch function)

Teaching Video

Remote control description

Tiktok is the default mode:
Tiktok mode: Press up, down, left and right respectively to slide the phone up, down, left and right to turn the page,
Click the A button to play/pause, double click to like,
The C key is for taking photos/recording videos,
B key long press is to adjust the mouse position key

If the mouse is too far away to brush the video
You need to hold down the B key (video symbol key + up,down,left,right,adjust themouse dot position to the center of the screen)

Tiktok shooting setting instructions

1:Update Tiktok to the latest version

2:open the Tiktok software andselect the "+" shooting button



3:Select the setting button in the upper right corner

4:Turn on and use the volume key to capture

Remove The Self Timer

Slide the remote control up and out.

Rechargeable battery

Android micro interface. No need for direct charging Replace the battery. The mobile phone charging treasure can be charged.

Clip can rotation

Flip freely and shoothorizontally andvertically to take photos from multiple angles, which is more.



How do I open the tripod

Rotate the bottom knob
1. Locked state. Rotate to the right to unlock the tripod. Unfold the tripod. Rotate to the left to lock the tripod. The tripod stands up.
2. Expand status. Unlock the tripod to the right and fold it up. Rotate to the left again to lock the tripod.

Stable platform

There is no need to be careful in shooting.The picture is very stable and clear.

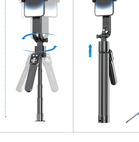

360° PTZ panorama

Smooth and smooth.Take a panoramic picture with ease.

Tripod mode

Pinch the electroplated part and push it down or lift it up to open or close the tripod.

Product parameters

ProductName:	Ai follow-up pan tilt bracket
Material:	ABS+electronic components
Battery model:	polymer 10250
Battery capacity:	3.7V/150mAh
Range:	6-8H
Charging:	The pan tilt is fully charged for about 2 hours, and the remote control is fully charged for about 1 hour
Controllable angle range:	Left and right (heading): 360 ° unrestricted manual up and down (pitch) 180
Main control chip:	IFLYTEK
Host charging power:	4.3W

Remote control parameters

Battery model: 402025
polymer(rechargeablebattery)
Charging condition: 5V1A
Battery capacity: 55mAh
Charge current: approximately 100mA
Full charge time: About 1-2 hours
Bluetooth version: 5.2
Bluetooth Name: VIP
Bluetooth communication: suitable forBluetoothversion 3.0 and above
Operating system: IOs/Android
universalsuitablefor most mobile phones,
Android 8.0 orabove,ios 4 or above)
Transmission frequency: 2.4GHz-2.4835GHZ
Communication distance: 10m (32 feet)
Maximum transmission power of remote control: 2dbm

Solution to the case of failure of remote control to connect to mobile phone

1. Turn on the Bluetooth of the mobile phone and clear some paired Equipment.
2. Turn off and restart the phone.
3. Turn off and restart the Bluetooth remote control.
4. Turn on the Bluetooth connection again.
5. If the connection still fails, restart the phone, the remote control and search the mobile phone interface .When you get the VIP , click Connect, and the interface displays "Connecting / Pairing", connect (pair) press the remote control button continuously andquickly, that still can be successfully connected.
6. Only the first time is required for the pro connection to the mobile connection in the future. normal use.

For Android phones, press the remote control to add sound Solution to the problem of quantity /focus adjustment and /or no response.

1. Open the camera to enter the photographing interface.
2. Swipe left or pnd the camera settings
3. Click the volume key function.
4. Set the volume key function to shutter (do notselect zoom or zoom Focus).
5. The setting path of individual mobile camera isdifferent, please prod it yourself.

Set the volume button of the Hongmeng system phone to the photo button

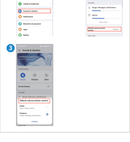
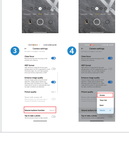
Set the volume key of the Android phone to the photo button